

Fuse disconnect EFD 10

INSTALLATION INSTRUCTION


LV-fuse-switch disconnect

Dimensions [mm]



Installation



CAUTION!
Installation by electricians only!

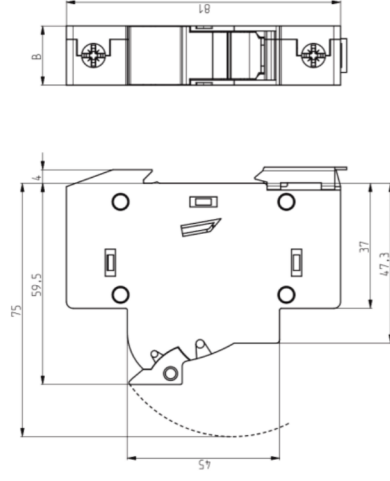

TYPE	1p	1p+N	2p	3p	3p+N
B [mm]	17.5	35	35	52.5	70

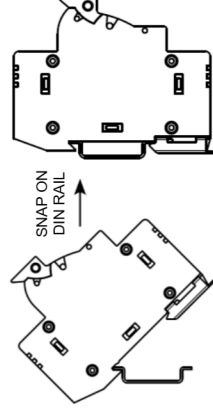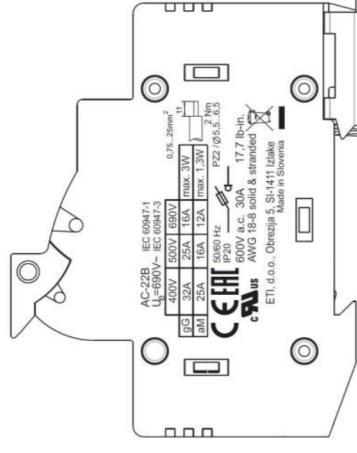


SNAP ON
DIN RAIL


NSD

Fuse link replace


Disassembly

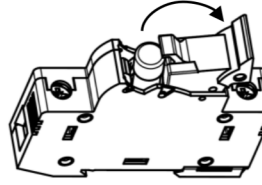


OPEN

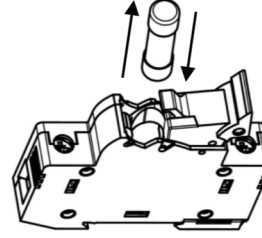


REPLACE FUSE LINK

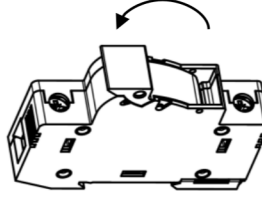

CLOSE

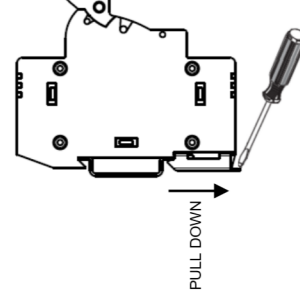

PULL DOWN

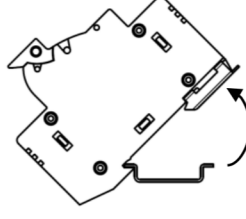

Fuse holder EFD 22 3p

INSTALLATION INSTRUCTION

Fuse holder EFD 22 3p



LV-fuse-switch disconnect

Dimensions [mm]


Installation



CAUTION!
Installation by electricians only!

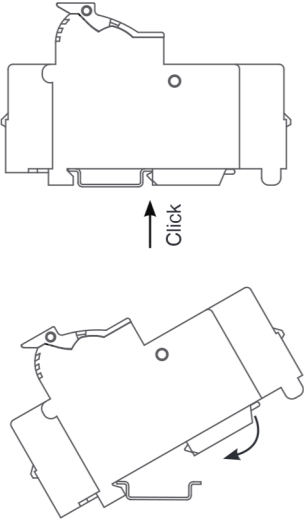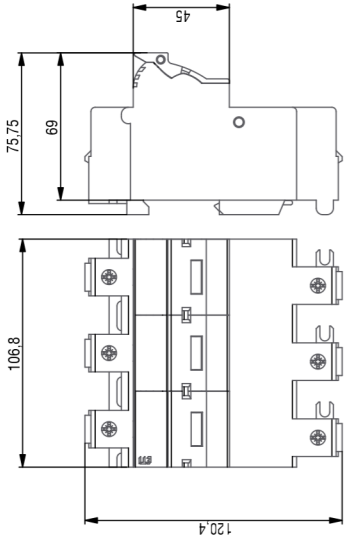

AC-21B IEC 60947-1		IEC 60947-3		CE		4...50mm ²	
U _N =690V~		500V		690V		max. 9.5W	
400V		100A		50A		max. 7W	
GG		aM		100A(50A)		80A	
50/60 Hz		PZ2		/2.5...6.5		2.5 - 3Nm	
IP20		600V a.c./d.c.		100A		26.6 lb.-in.	
cULus		AWG 12-2 solid & stranded		Do not operate under load for DC voltage		Made in Slovenia	

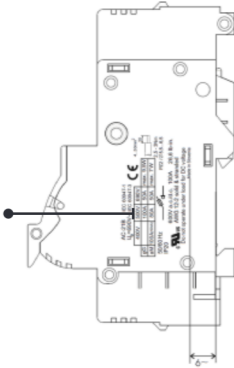

Fuse replace

Disassembly

