

ADAX NEO H/L WIFI (WT2)

Table of contents

1. Installation manual

Pages 2-3

2. WIFI (WT2) thermostat user guide







Page 4 – NO
Page 5 – SE
Page 6 – FI
Page 7 – GB
Page 8 – DE
Page 9 – LT
Page 10 – LV
Page 11 – EE
Page 12 – BG
Page 13 – GR
Page 14 – CZ
Page 15 – HU
Page 16 – HR
Page 17 – PL
Page 18 – SK
Page 19 – RO
Page 20 – RU
Page 21 – ES
Page 22 – IL
Page 23 – SI
Page 24 – IT
Page 25 – RS
Page 26 – NL
Page 27 – FR
Page 28 – PT

3. Ecodesign information



Pages 29-35

4. Declaration of conformity

Page 36

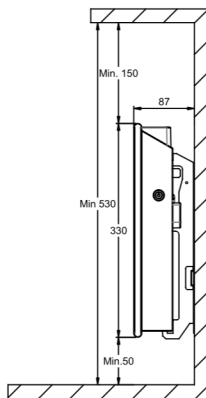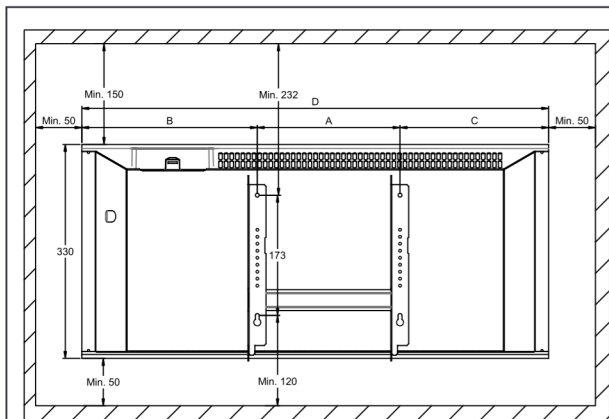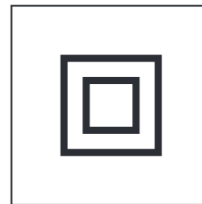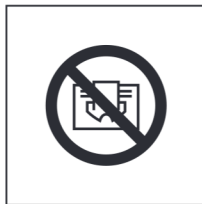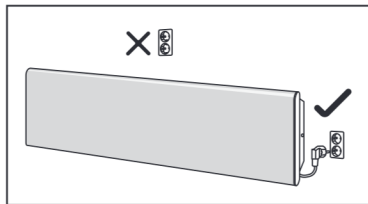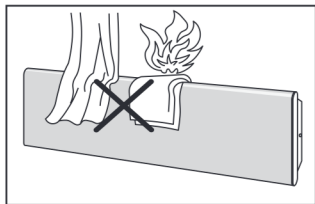

NEO H	Watt	B	A	C	D
NEO H 02	250	227	201	92	520
NEO H 04	400	227	201	137	565
NEO H 06	600	227	201	207	635
NEO H 08	800	236	302	212	750
NEO H 10	1000	268	302	239	809
NEO H 12	1200	356	302	326	984
NEO H 14	1400	263	604	227	1094
NEO H 20	2000	414	604	385	1403

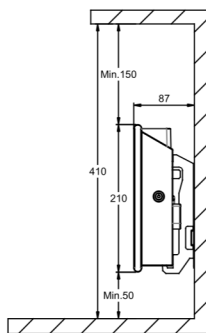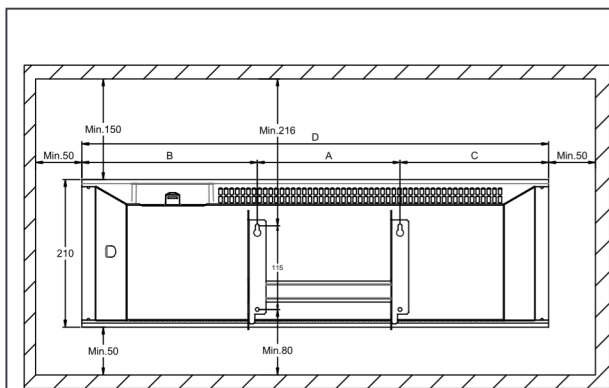

NEO L	Watt	B	A	C	D
NEO L 02	250	237	201	217	655
NEO L 04	400	253	302	228	783
NEO L 06	600	364	302	339	1005
NEO L 08	800	303	604	279	1186
NEO L 10	1000	386	604	390	1380
NEO L 12	1200	484	604	460	1548
NEO L 14	1400	293	1198	269	1760

